





# PolarPlex™ P2 Swing Door Assembly Guide

Attach header to vertical support posts with bolts

Attach flanges with self tappers

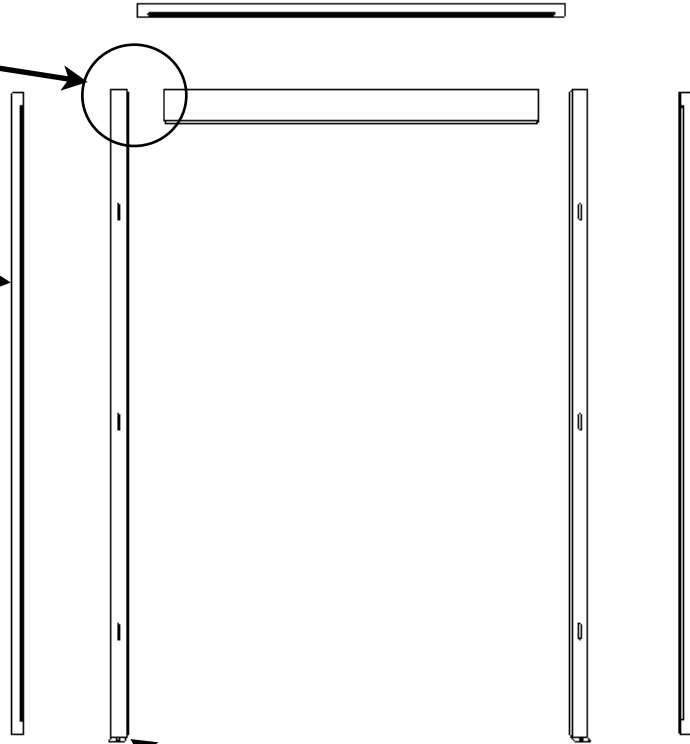

Vertical posts have threaded pem inserts on sides for attaching additional brackets if necessary

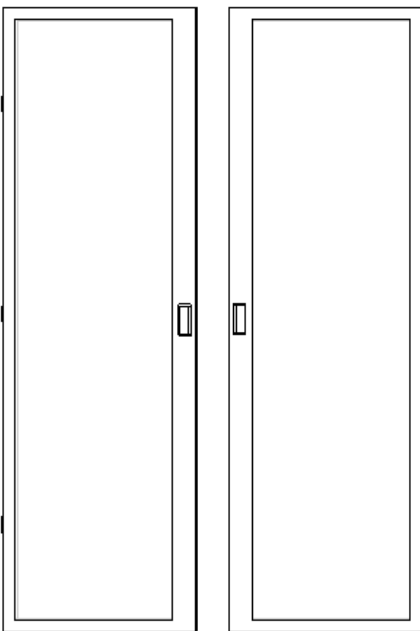

After frame is installed and leveled, attach doors by sliding onto hinge posts

