



# POLARGY FLAT-PACK RACK CHIMNEY INSTALL GUIDE

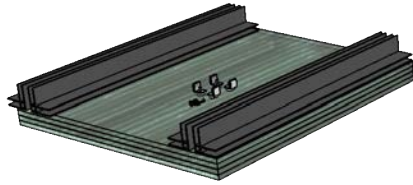

## Step #3

Place assembled chimney on rack to check for fit. Adjust panels within connectors as needed.

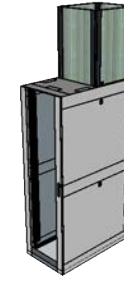

## Step #1

Parts included:

- Qty (4) Polycarbonate Side Panels
- Qty (4) Corner connectors
- Qty (1) Kit: (4) brackets with magnets and VHB tape, (16) Self-tapping screw

Tools Required

1. Drill with Philips bit.

## Step #4


Remove from rack. Secure corner connectors to panels with self-tapping screws. Place screws 2" from top and bottom edges. Use (4) screws per bracket.

Screws




## Step #2

Connect all panels with corner brackets.

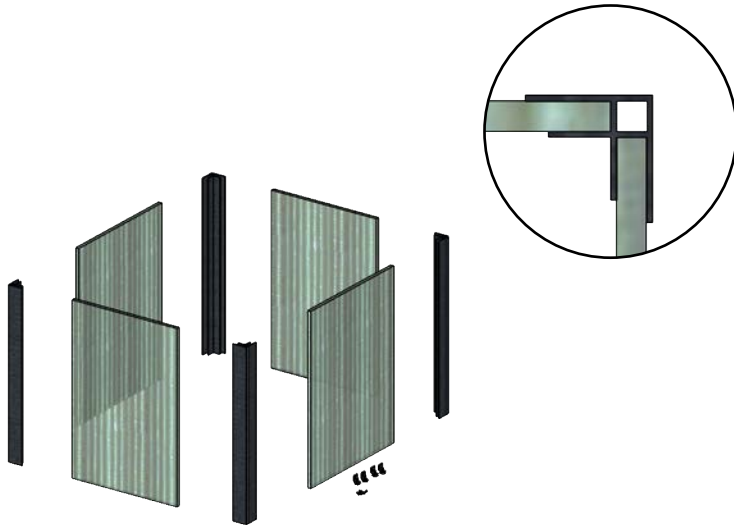

## Step #5

Place chimney on the rack. Attach magnet brackets with VHB tape to each side panel. Ensure magnets rest on non-removable surface.

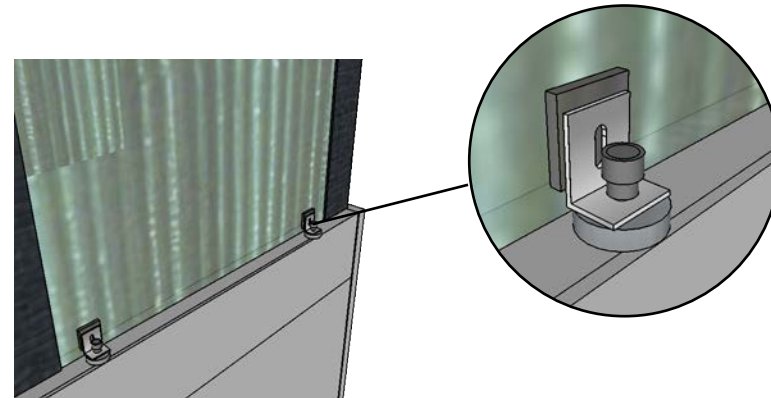

**POLARGY**

DATE CREATED  
February 29, 2016

ISSUE DATE  
August 16, 2017

LOCATION  
Sunnyvale, CA, USA

PROJECT NAME  
**Flat-Pack Exhaust Chimney  
Installation Guide  
REV B**