



# POLARGY FLAT-PACK CRAC EXTENSION INSTALL GUIDE

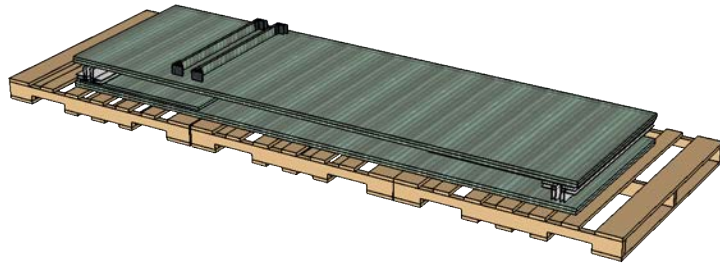

## Step #3

Place assembled product on CRAC to check for fit. The product should rest on non-removable face/edges. Allow 1" spacing on the side panel for bracket/magnet placement. Adjust corner pieces in and out for best fit.

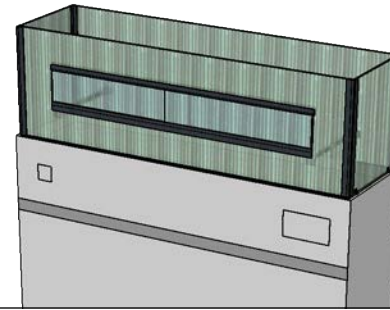

## Step #1

- Parts included:
- Qty (2) Polycarbonate Side Panels
- Qty (2) Polycarbonate Endcaps Panels
- Qty (4) Corner pieces.
- Qty (2) Stiffeners w/ VHB tape.
- Qty (1) Kit: (4) brackets with magnets and VHB tape, (16) Self-tapping screws

### Tools Required

1. Drill with Philips bit.

## Step #4



Remove from the CRAC unit. Secure corner pieces to panels with self-tapping screws. Place screws 2" from top and bottom edges. Use (4) screws per corner.

Screws




## Step #2

Assemble panels into corner pieces.

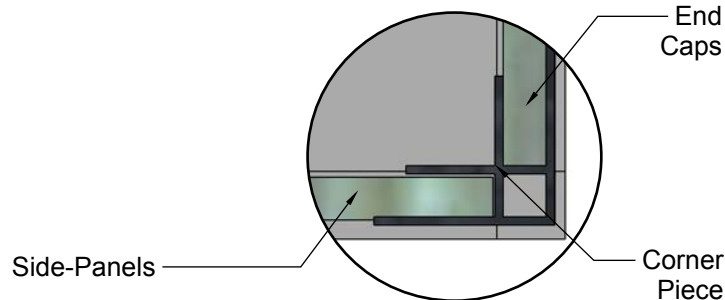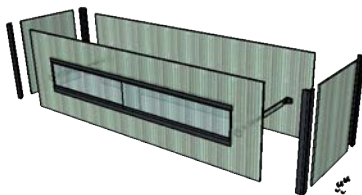


## Step #5

Place extension on the CRAC unit. Attach (2) magnet brackets with VHB tape to each side panel. Ensure magnets rest on non-removable surface.

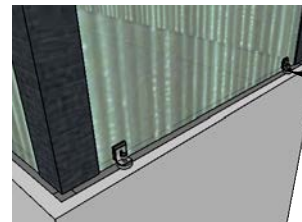


Bracket w/magnet

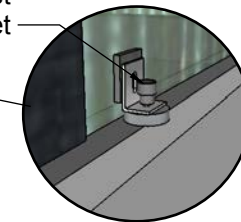


## Step #6

Attach two stiffeners with VHB tape inside the extension, near window bottom channel.

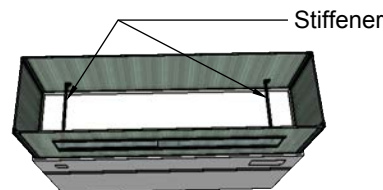

Attach with VHB Tape

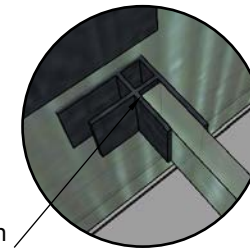

POLARGY

DATE CREATED  
February 29, 2016

ISSUE DATE  
August 16, 2017

LOCATION  
Sunnyvale, CA, USA

PROJECT NAME  
**Flat-Pack CRAC Extension  
Installation Guide  
REV B**

01